

Alphabetical index

Alphabetical index

A		
	"AUTO" driving mode	104
	A/C	186, 194
	ABS	166
	Active rear wing	171
	Air conditioning filter	283
	Air conditioning system	
	Air conditioning filter	283
	Automatic air conditioning	
	system	186, 194
	Air gauge	278
	Airbags	
	Airbag operating conditions	65
	Airbag precautions for your	
	child	68
	Airbag warning light	314
	General airbag precautions	68
	Locations of airbags	61
	Modification and disposal of	
	airbags	71
	Passenger occupant	
	classification system	72
	Proper driving posture	59
	Seat airbag precautions	68
	Seat belt airbag operating	
	conditions	65
	SRS airbags	61
	Alarm	55
	Anti-lock brake system	166
	ASG	102
	Audio input* ¹	
	Audio system	202
	Auto away function	33
	Automatic air conditioning	
	system	186, 194
	Automated Sequential Gearbox	102
	Average fuel consumption	118, 132
	Average vehicle speed	119, 132
	AUX port* ¹	

B	Back camera	163
	Back door	
	Opener.....	29
	Back door light	
	Replacing light bulbs	299
	Wattage	367
	Back monitor	163
	Back-up lights	
	Wattage	367
	Battery	
	Checking.....	265
	Terminals	265
	If the vehicle has a	
	discharged battery	348
	Warning light.....	313
	Warning message	327
	Wireless remote control	
	battery	285
	Bottle holder	211
	Brake	
	Braking sound.....	90
	CCM brake disc	365
	Fluid	262
	Parking brake	113
	Warning light.....	312, 314
	Warning message	327
	Brake assist.....	166
	Brightness control	147

C	Camera	163
	Care	
	Exterior.....	228
	Interior	235
	Seat belts	236
	Cargo capacity	176
	CCM brake disc	365
	Chains	181
	Child restraint system	
	Booster seats, definition	76
	Booster seats, installation	82
	Convertible seats, definition.....	76
	Convertible seats, installation.....	81
	Installing CRS with seat belts.....	81
	Installing CRS with top straps.....	83
	Passenger occupant	
	classification system	72
	Child safety	
	Active rear wing	172
	Airbag precautions	68
	Battery precautions	268, 350
	Child restraint system	76
	How your child should wear	
	the seat belt	38
	Installing child restraints.....	80
	Power window precautions	48
	Rear hatch precautions.....	30
	Removed wireless remote	
	control battery precautions.....	286
	Seat belt guide.....	37
	Seat belt precautions	39
	Seat heater precautions.....	35

*1. Refer to "Navigation System Owner's Manual".

Cleaning	
Exterior	228
Interior	235
Seat belts	236
Clock	148
Condenser	261
Control pad	125
Cooling system	
Engine overheating	351
Current fuel consumption	132
Customizable features	383
D Daytime running light system	159
Defogger	
Rear window	201
Side mirror	201
Dimension*2	
Dinghy towing	183
Discharge headlights	
Discharge headlight	
precautions	300
Replacing light bulbs	299
Switch	158
Wattage	367
Display	
Menu display	124
Rear view monitor system	163
Trip information	118
Warning message	322
Do-it-yourself maintenance	247

Door courtesy lights	
Door courtesy lights	207
Wattage	367
Door pockets	212
Doors	
Door lock	22, 25
Door windows	46
Side mirrors	43
Down light	207
Driver's seat belt reminder light	315
Driving	
Correct posture	59
Procedures	88
Driving mode	104
Driving range	119

E	Electric power steering	166
	Emergency, in case of	
	If the active rear wing will	
	not operate	325
	If the engine will not start	343
	If the fuel filler door cannot	
	be opened	50
	If the parking brake cannot	
	be released	345
	If the rear hatch cannot be	
	opened	29
	If the vehicle has a discharged	
	battery	348
	If the warning buzzer sounds	312
	If the warning light turns on	312
	If the warning message is	
	displayed	322
	If you have a flat tire	332
	If you lose your keys	344
	If you lose your wireless	
	remote control	344
	If you think something is	
	wrong	308
	If your vehicle becomes stuck	354
	If your vehicle has to be	
	stopped in an emergency	355
	If your vehicle needs to be	
	towed	303
	If your vehicle overheats	351

Emergency flashers	
Switch	302
Engine	
"ENGINE START" switch	98
Compartment	256
Engine coolant	260
Engine coolant temperature	
gauge	116
Engine oil pressure gauge	116
Engine oil temperature gauge	116
Engine speed restrictions	90
Engine starting restrictions	181
Hood	250
How to start the engine	98
Identification number	358
Idling with five cylinders	90
If the engine will not start	343
Ignition switch	98
Overheating	351
Tachometer	260
Variable red zone	119
Warning light	314
Warning message	324, 327
Engine coolant	
Capacity	362
Checking	260
Coolant type	362
Engine coolant temperature	
gauge	116
Preparing and checking	
before winter	180

*2: Refer to "Inside the LFA".

Engine coolant temperature
 gauge.....116

Engine immobilizer system.....53

Engine oil

 Adding engine oil.....257

 Capacity.....361

 Checking.....257

 Engine oil consumption.....258

 Engine oil pressure gauge.....116

 Engine oil temperature gauge.....116

 Oil brand.....361

 Temperature.....100

 Warning message.....324, 327

Engine oil level.....132

Engine oil maintenance.....132

Engine oil temperature.....116

EPS.....166

Event data recorder.....310

F

First-aid kit.....218

Flatbed tow truck.....306

Floor jack.....253

Floor mats.....215

Fluid

 Brake.....262

 Washer.....264

Front turn signal lights

 Switch.....112

 Replacing light bulbs.....299

 Wattage.....367

Fuel

 Capacity.....360

 Fuel gauge.....116

 Fuel pump shut off system.....309

 Fuel tank cap.....49

 Information.....368

 Warning light.....315

Fuel consumption.....118, 132

Fuel filler door

 Fuel tank.....49

 Washer fluid.....264

Fuel pump shut off system.....309

Fuses.....287

G

Gauges

 Adding engine oil.....257

 Tire pressure.....270

 Meter.....116

Gear changes.....102

Glove box.....210

H	Hazard lights.....	302
	Headlight cleaner	160
	Headlight low/high beams.....	158
	Headlights	
	Discharge headlight	
	precautions	300
	Replacing light bulbs	299
	Switch	158
	Wattage	367
	Heaters	
	Seat heaters.....	32
	Side mirror.....	201
	High beams	158
	High mounted stoplight	
	Replacing light bulbs	299
	Hill-start assist control	166
	Hood	250
	Hooks	
	Tonneau cover	218
	Horn.....	115
	Hub socket.....	281

I	I/M test.....	246
	Identification	
	Engine.....	358
	Vehicle	358
	Ignition switch.....	98
	Ignition switch light.....	207
	Illuminated entry system	207
	Illumination	207
	Indicator lights.....	121
	Initialization	
	Items to initialize	386
	Inside rear view mirror	42
	Interior lights	
	Down light	207
	Ignition switch light.....	207
	Interior lights.....	207
	Switch.....	208
	Wattage.....	367
	Intermittent adjuster	160

J Jack
 Positioning a floor jack.....253

K Keys
 If you lose your keys.....344
 If you lose your wireless
 remote control.....344
 Ignition switch.....98
 Key number.....20
 Master key.....20
 Premium master key.....20
 Valet key.....20
 Wireless remote control key.....22
 Key number.....20

L Language setting.....148
Lap timer.....142
Launch control.....174
License plate lights
 Replacing light bulbs.....299
 Switch.....158
 Wattage.....367
Light bulbs
 Replacing.....299
 Wattage.....367
Lights
 Door courtesy lights.....207
 Down light.....207
 Emergency flasher switch.....302
 Hazard light switch.....302
 Headlight switch.....158
 Ignition switch light.....207
 Interior light switches.....208
 Luggage compartment light.....367
 Replacing light bulbs.....299
 Turn signal lever.....112
 Wattage.....367
Load capacity.....179
Luggage compartment
 First-aid kit installation.....218
 Tonneau cover.....218
Luggage compartment features.....218
Luggage compartment light.....367

M	Maintenance		O	Odometer	116
	Do-it-yourself maintenance.....	247		Oil	
	General maintenance.....	242		Engine oil.....	257
	Maintenance data.....	358		Front counter gear.....	363
	Maintenance requirements.....	240		Oil level	132
	Manual transmission	102		Oil maintenance	132
	Master key	20		Opener	
	Menu display	124		Fuel filler door.....	49
	Meter			Hood.....	250
	Control pad.....	125		Rear hatch.....	29
	Instrument panel light control.....	147		Washer fluid.....	264
	Menu.....	124		Outside rear view mirrors	43
	Meters.....	116		Outside temperature display	186
	Mirrors			Outside temperature unit	116, 148
	Inside rear view mirror.....	42		Overheating, Engine	351
	Side mirror heater.....	201			
	Side mirrors.....	43			
	Vanity mirror.....	213			
N	Navigation system *1				
	Needle color setting	148			
	Neutral				
	Selecting Neutral.....	103			
	Noise from under vehicle	15			

*1: Refer to "Navigation System Owner's Manual".

P	Paddle shift switches	102
	Parking	88
	Parking brake	
	If the parking brake cannot	
	be released.....	345
	Parking brake	113
	Warning light.....	312, 314
	Warning message.....	324, 325
	Passenger occupant	
	classification system	72
	Passenger's seat belt	
	reminder light.....	315
	Parking lights	
	Replacing light bulbs.....	299
	Switch	158
	Penlight	211
	Personal lights	
	Switch	208
	Power easy access system.....	33
	Power outlet.....	214
	Power windows	46
	Premium master key	20

R	Radiator	
	Overheating	351
	Radiator grille precaution ..	233, 234
	Rear hatch	
	Opener	29
	Storage precautions.....	29
	Rear hatch light	
	Wattage	367
	Rear turn signal lights	
	Replacing light bulbs	299
	Wattage	367
	Rear view monitor system	163
	Rear window defogger	201
	Rear wing	171
	Replacing	
	Air conditioning filter	283
	Fuses.....	287
	Light bulbs	299
	Wireless remote control	
	battery	285
	Reporting safety defects for	
	U.S. owners.....	388
	Rear view mirror	43
	Rev indicator	129
	Rev Peak	148
	Reverse selector switch.....	103

S	Safety connect.....	219	Service reminder indicators	121
	Seat belts		Settings.....	148
	Automatic locking retractor.....	38	Shift change.....	102
	Child restraint system		Shift speed level.....	107
	installation	80	Shift speed selector	107
	Cleaning and maintaining		Side marker lights	
	the seat belts.....	236	Replacing light bulbs.....	299
	Emergency locking retractor	37	Switch.....	158
	How to wear your seat belt.....	36	Wattage.....	367
	How your child should wear		Side mirror.....	43
	the seat belt.....	38	“SOS” button* ¹	
	Pregnant women,		Spark plug.....	362
	proper seat belt use.....	38	Specifications* ²	358
	Reminder light.....	315	Speed indicator	126
	Seat belt guide.....	37	Speed meter	
	Seat belt pretensioners.....	37	Speed indicator.....	126
	Seat belt airbags	61	Speed meter	116
	Seat heaters.....	32	Start switch	98
	Seating capacity	179	Starting the engine	98
	Seats		Status information.....	132
	Adjustment	32	Steering wheel	
	Adjustment precautions.....	34	Adjustment.....	41
	Child seats/child restraint		Stop/tail lights	
	system installation.....	80	Replacing light bulbs.....	299
	Cleaning	235	Switch.....	158
	Properly sitting in the seat.....	59	Storage feature.....	209
	Power easy access system.....	33	Stuck	
	Seat heaters.....	32	If your vehicle becomes stuck.....	354
			Sun visors	213

*¹: Refer to “Navigation System Owner’s Manual”.

*²: Refer to “Inside the LFA”.

Switch

"ENGINE START" switch	98
Active rear wing.....	171
Air conditioning system.....	186, 194
Audio system.....	202
AUTO driving mode button.....	104
Control pad.....	125
Driving mode selector switch	104
Emergency flasher switch	302
Hazard light switch.....	302
Interior lights.....	208
Light switches.....	158
Paddle shift switches.....	102
Parking brake	113
Power door lock switch	25
Power window switch.....	46
Reverse selector switch	103
Shift speed selector	107
Talk switch* ¹	191
Turn signal lever.....	167
VSC off switch.....	112
Wipers and washer switch.....	160

T

Tachometer

Tacho indicator	129
Tachometer.....	116
Rev Peak.....	148

Tail lights

Replacing light bulbs	299
Switch.....	158

Talk switch*¹

.....	191
-------	-----

Theft deterrent system

Alarm.....	55
Engine immobilizer system.....	53

Timer

Lap timer	142
-----------------	-----

Tire information

Glossary	377
Size.....	373
Tire identification number.....	372
Uniform tire quality grading.....	375

Tire inflation pressure

.....	132, 366
-------	----------

Tire inflation pressure gauge.....

.....	278
-------	-----

Tires

Air gauge.....	278
Chains.....	181
Checking.....	270
If you have a flat tire	332
Inflation pressure.....	132, 366
Inflation pressure sensor	270
Information	371
Size.....	366
Snow tires.....	180
Tire inflation pressure gauge.....	278
Tire inflation pressure label	277
Tool bag.....	281, 332

Tonneau cover	218
Tool bag	281, 332
Total load capacity.....	179
Towing	
Dinghy towing.....	183
If your vehicle needs to be towed	303
Trailer towing.....	182
TRAC.....	166
Traction control	166
Transmission shift switches	102
Transmitter	
If you lose your wireless remote control	344
Key	22
Replacing the battery	285
Transporting the vehicle	303

Trip information	118, 132
Trip meter	118
Turn signal lights	
Replacing light bulbs.....	299
Switch.....	112
Wattage.....	367

U

Units	148
-------------	-----

V

Vanity mirror	213
VDIM.....	166
Vehicle dynamics integrated management	166
Vehicle identification number	358
Vehicle stability control.....	166
Vehicle status	132
Vehicle towing	182, 183
Vehicle speed indicator	126
VSC.....	166

*1: Refer to "Navigation System Owner's Manual".

W	Warning buzzers.....	312
	Warning lights.....	312
	Warning messages	322
	Warnings	
	Discharge headlights.....	300
	Replacing light bulbs.....	300
	Washer	
	Capacity.....	362
	Checking.....	327
	Preparing and checking	
	before winter.....	180
	Switch.....	160
	Warning message.....	327
	Washing and waxing.....	228
	Weight	
	Cargo capacity.....	176
	Load limits	179
	Weight* ²	
	Wheel bolts	281
	Wheels	281
	Care	281
	Size	366
	Window glasses	46
	Windows	
	Power windows.....	46
	Rear window defogger	201
	Windshield wipers	160
	Washer	160
	Windshield wipers.....	160
	Wireless remote control key	
	If you lose your wireless	
	remote control.....	344
	Key.....	22
	Replacing the battery	285

*²: Refer to “Inside the LFA”.